

TOSHIBA QUICK TIPS

“Miscellaneous Warnings Displayed”

- **“Left Paper Tray Empty”**
 - This is just a notification that paper can be added to the left side of the bottom paper tray. NO ACTION IS NECESSARY.
- **“Paper Tray Empty”**
 - One or more of the trays are empty. As long as there is paper in another drawer – NO ACTION IS NECESSARY.
- **“Toner near Empty (***)”**
 - A toner is running out *** indicates the color.
 - The color abbreviations are:
 - ✓ Y: yellow
 - ✓ M: magenta
 - ✓ C: cyan
 - ✓ K: black
 - Solution: Order toner and wait for “Toner Cartridge Empty” warning to replace toner – (it is best to use up all the toner before replacing it).

